
2 Channel Relay Module Bluetooth 4.0 BLE for Apple Android Phone IOT

You need power the relay module, there are 2 motheds:

- L) Use the DC power supply to connect the 5V power supply interface
- Use the 9V power supply adapter to connect the 6-24V power supply interface. Please pay more attention about the positive and negative. When the connection is right, the LED will be on. If the LED did not turn on in 3 seconds after connection, please exchange the positive and negative and try again.

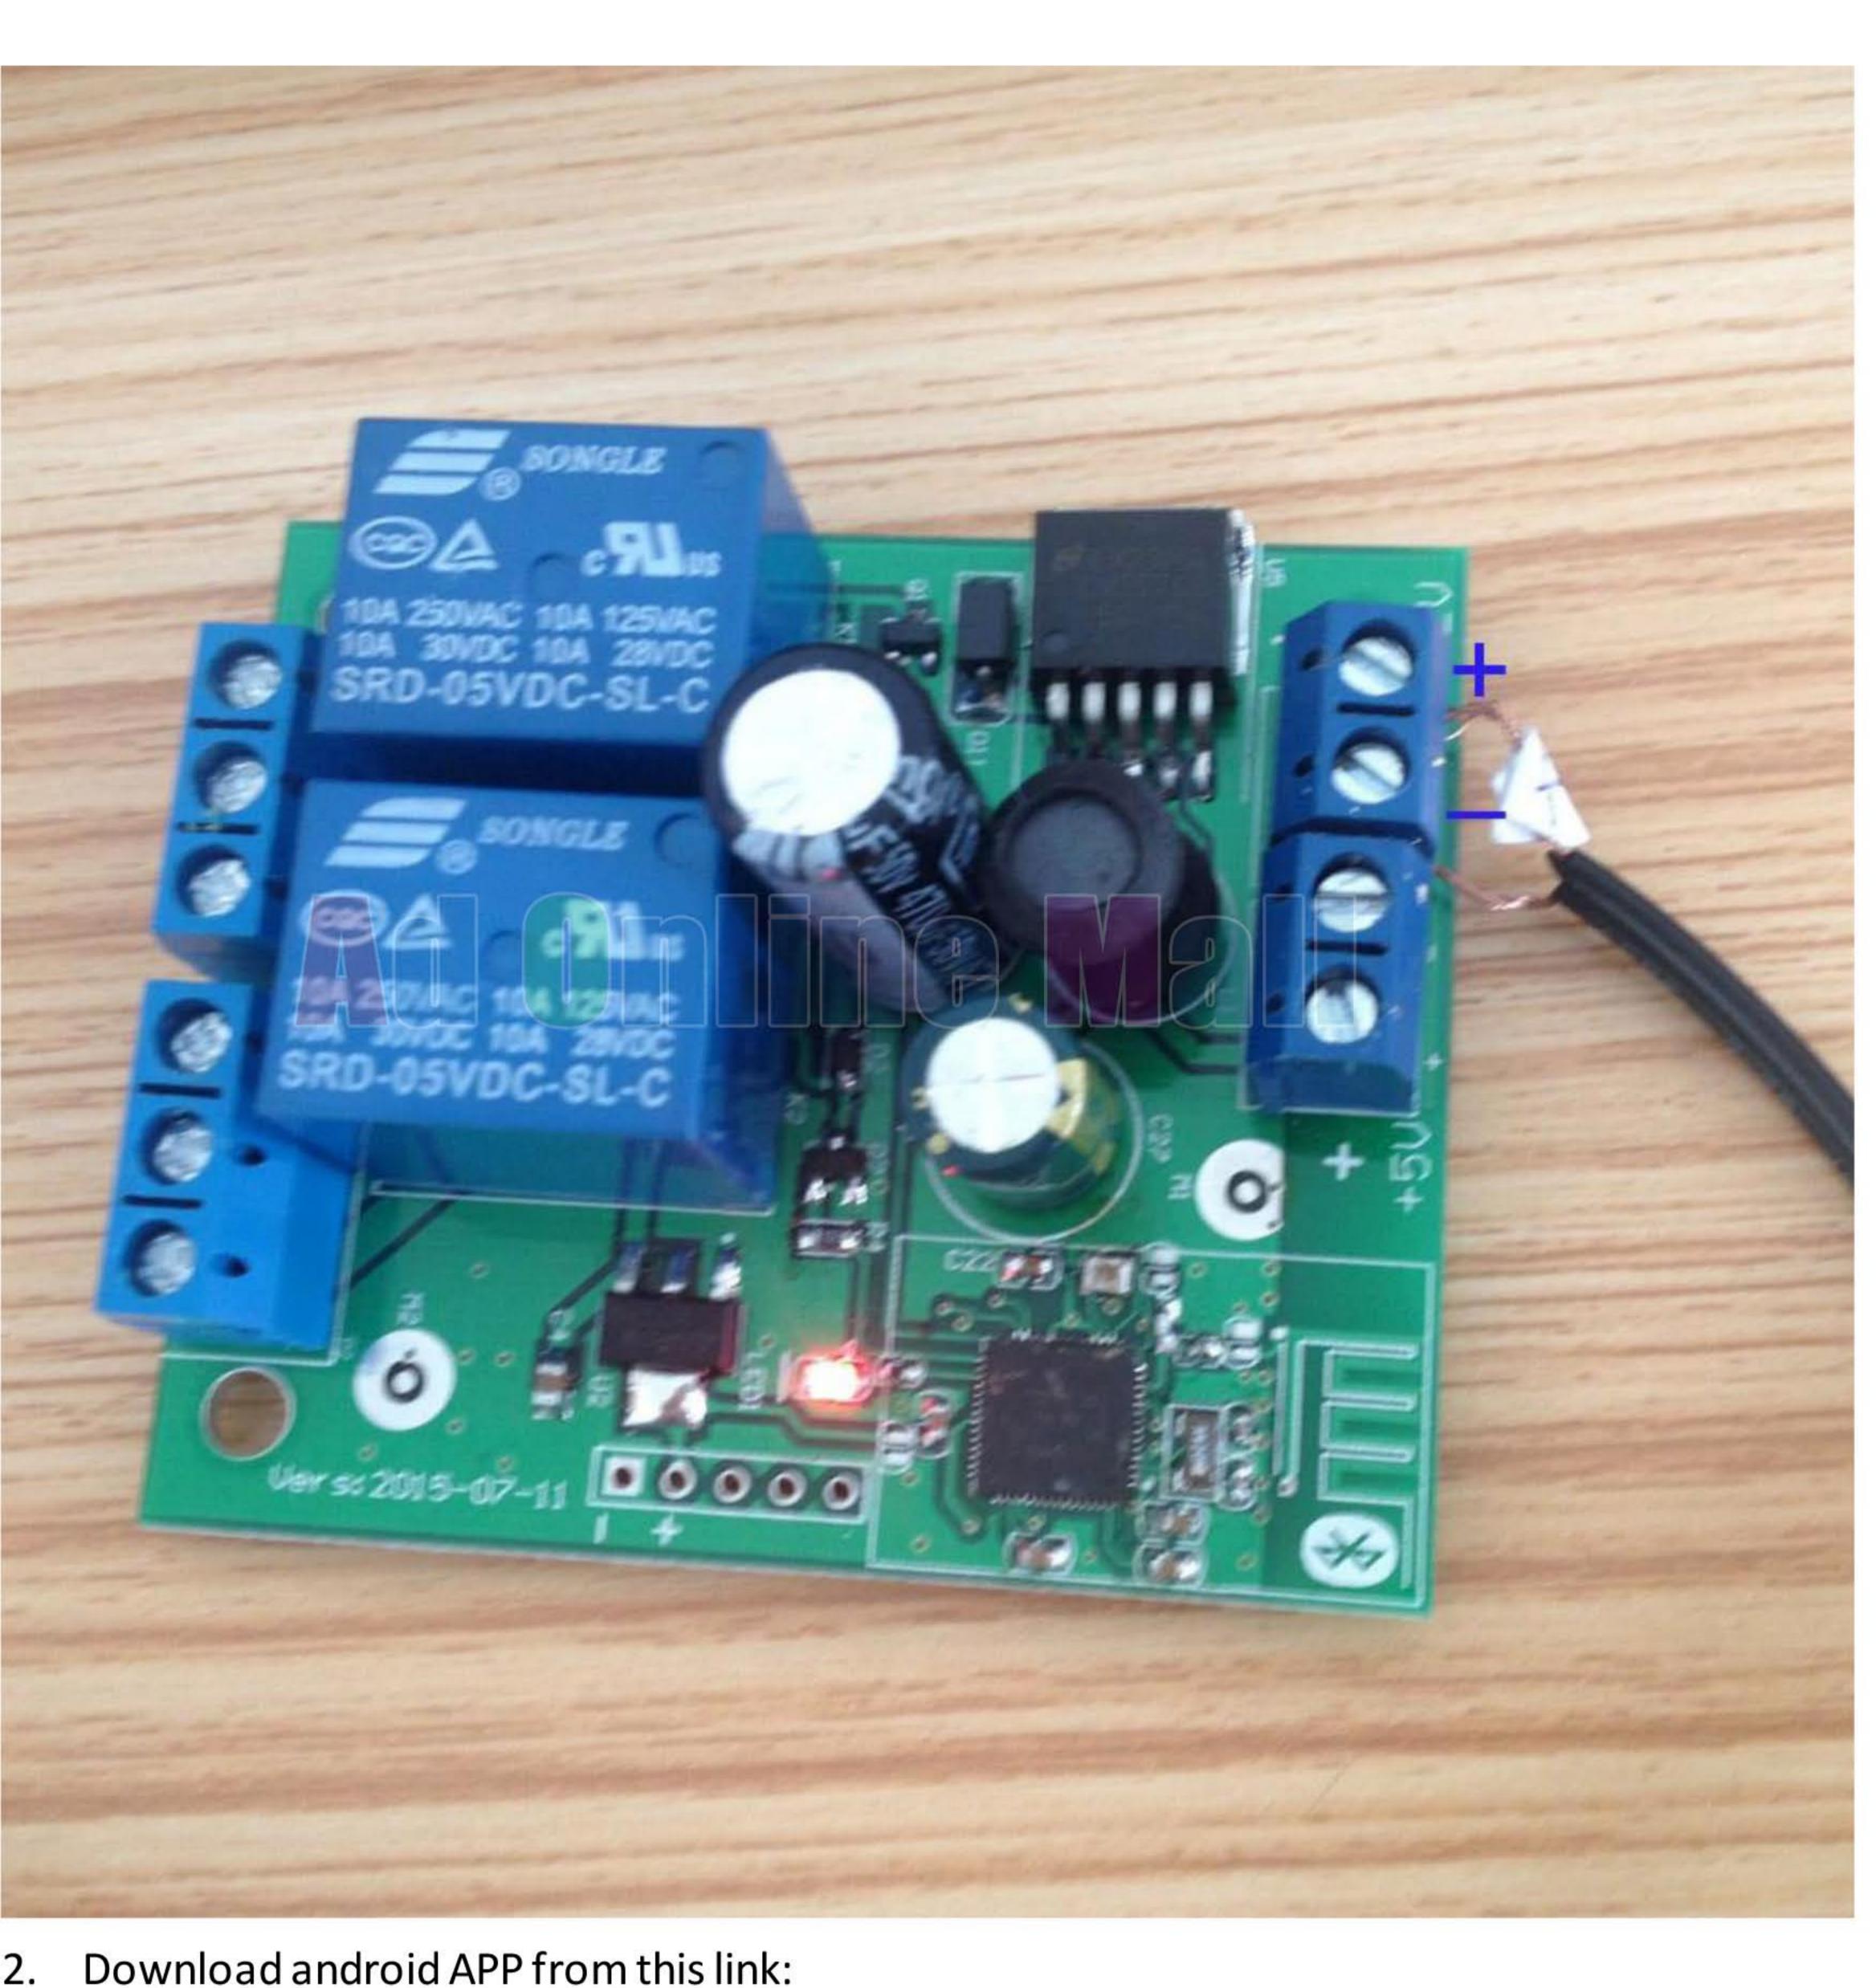



NOTE: The android phone must support Bluetooth 4.0 and the system must be 4.3+.

https://www.adrive.com/public/WxDAhn/Andoid%20app.rar

you will find the relay module:ZL-RC02D

After installing it ,please open the APP, then you will go to this page,please click scan, then

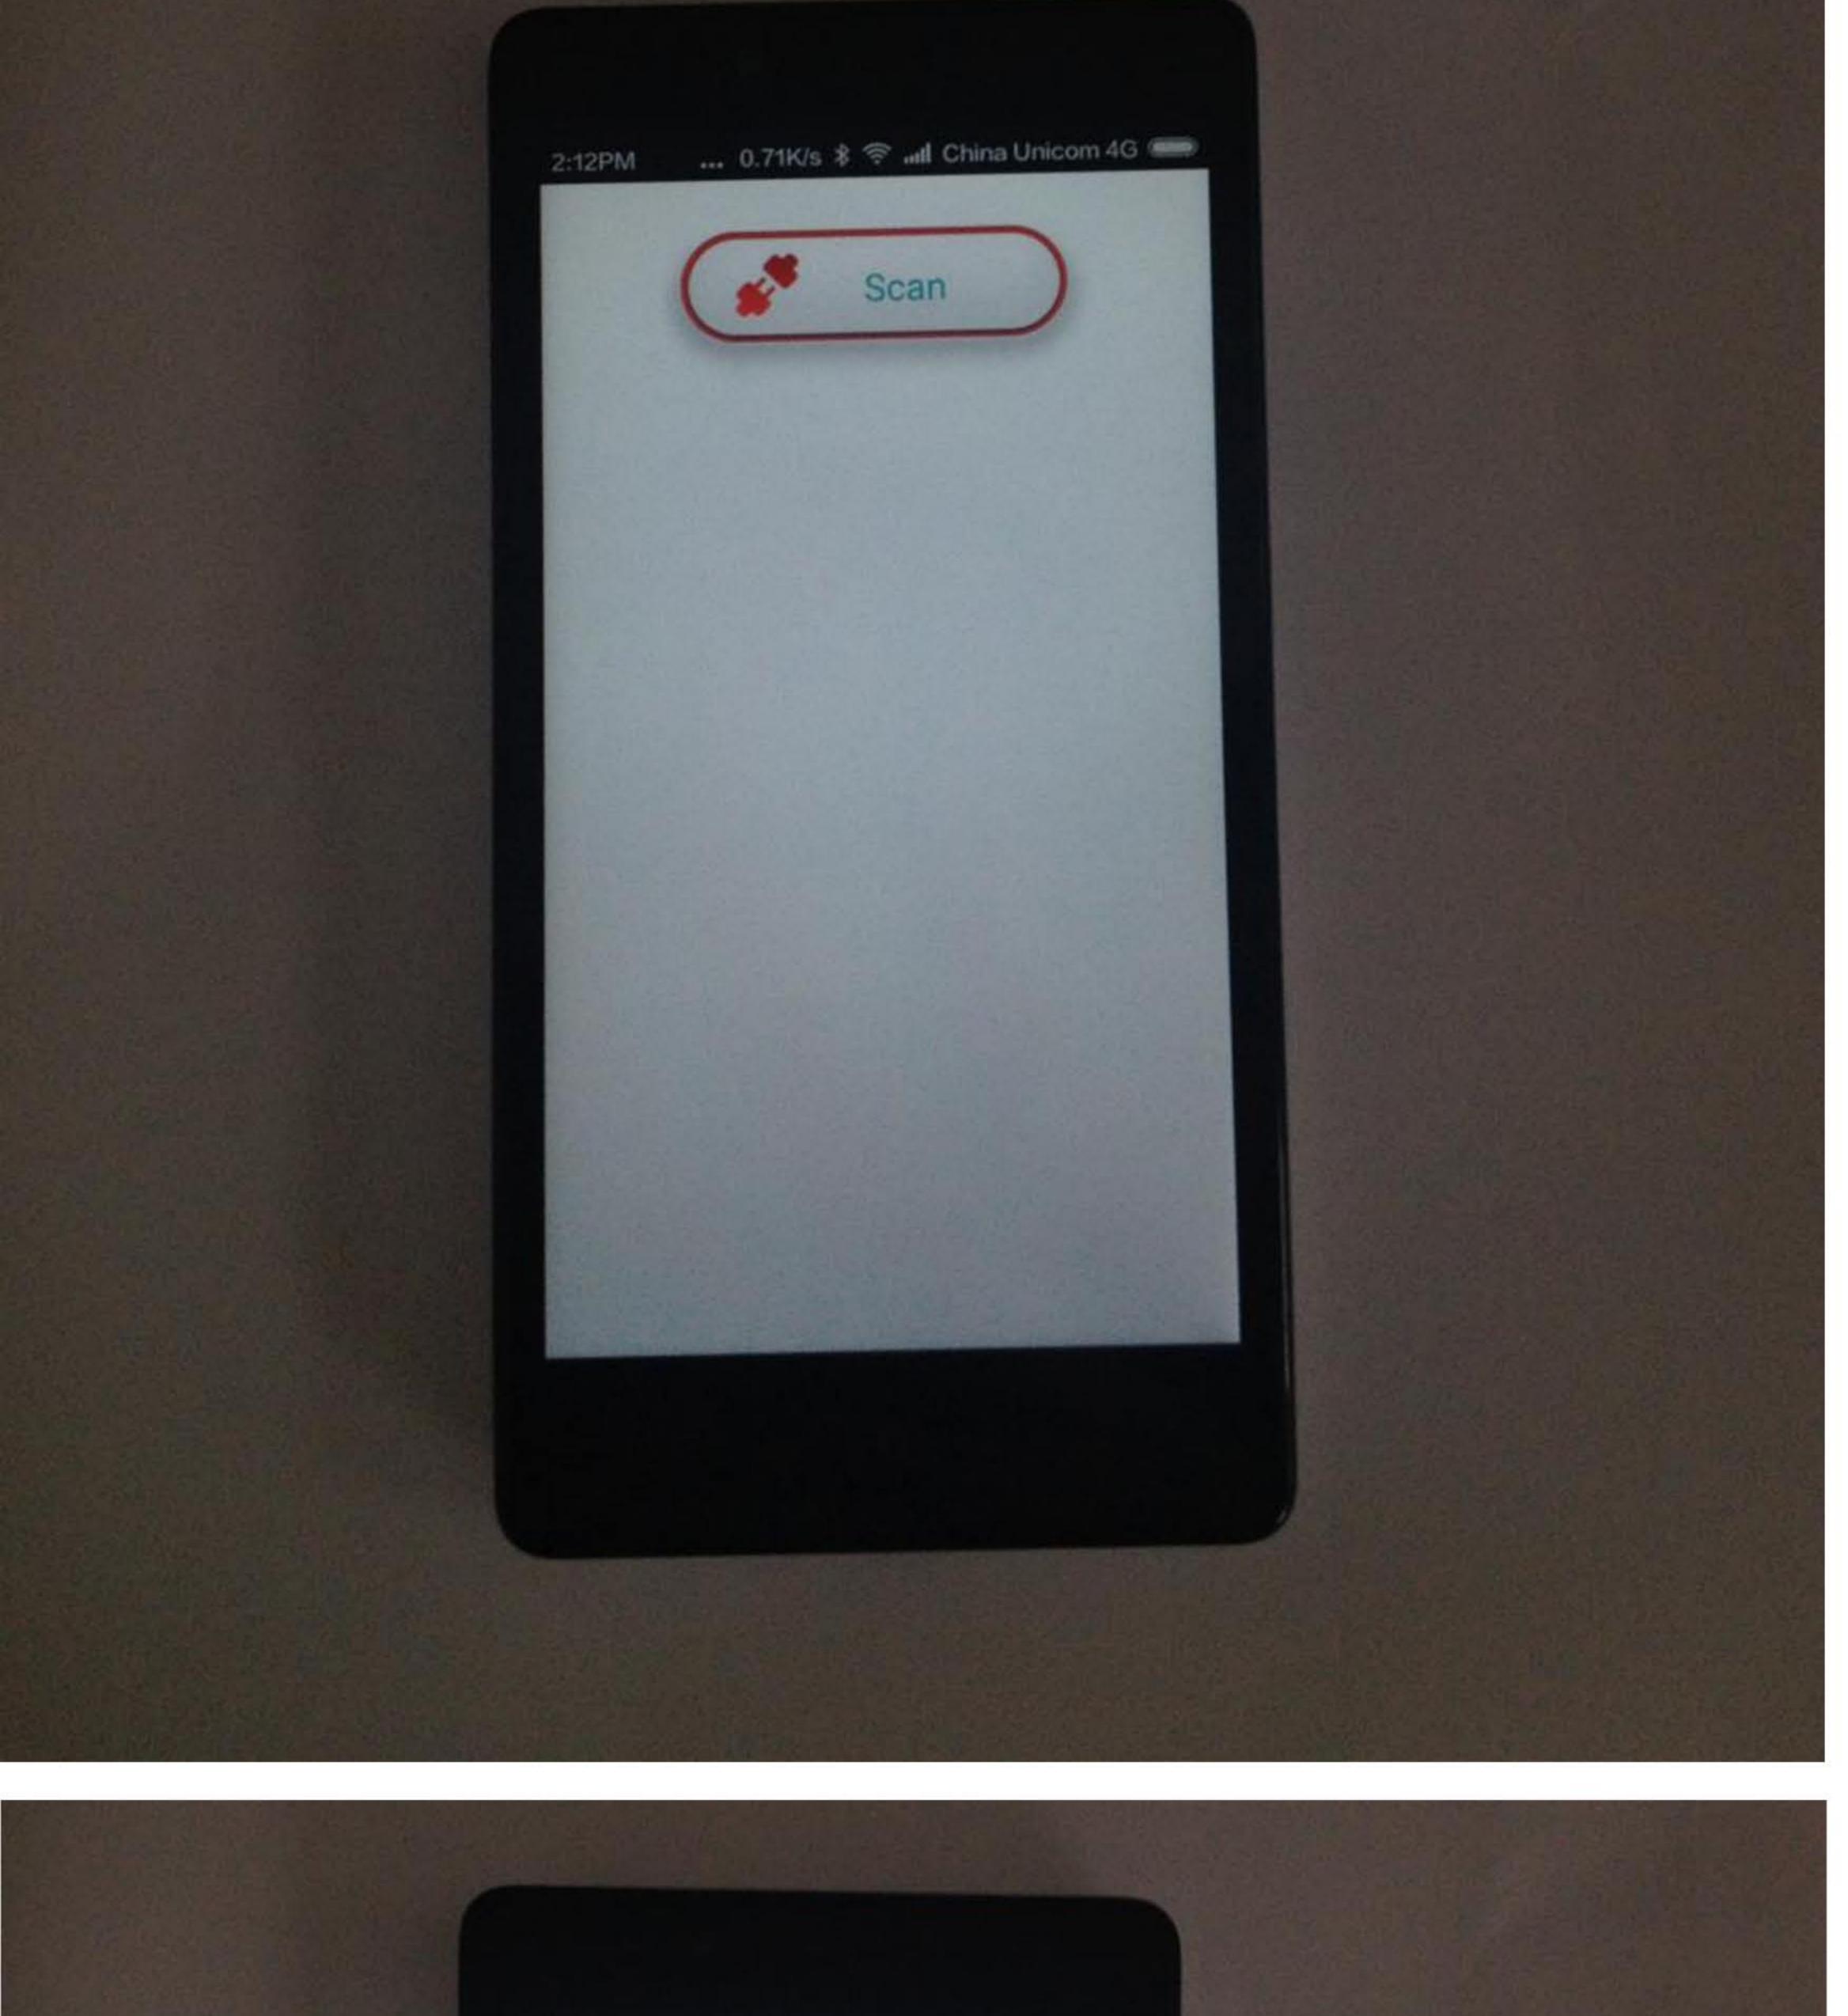

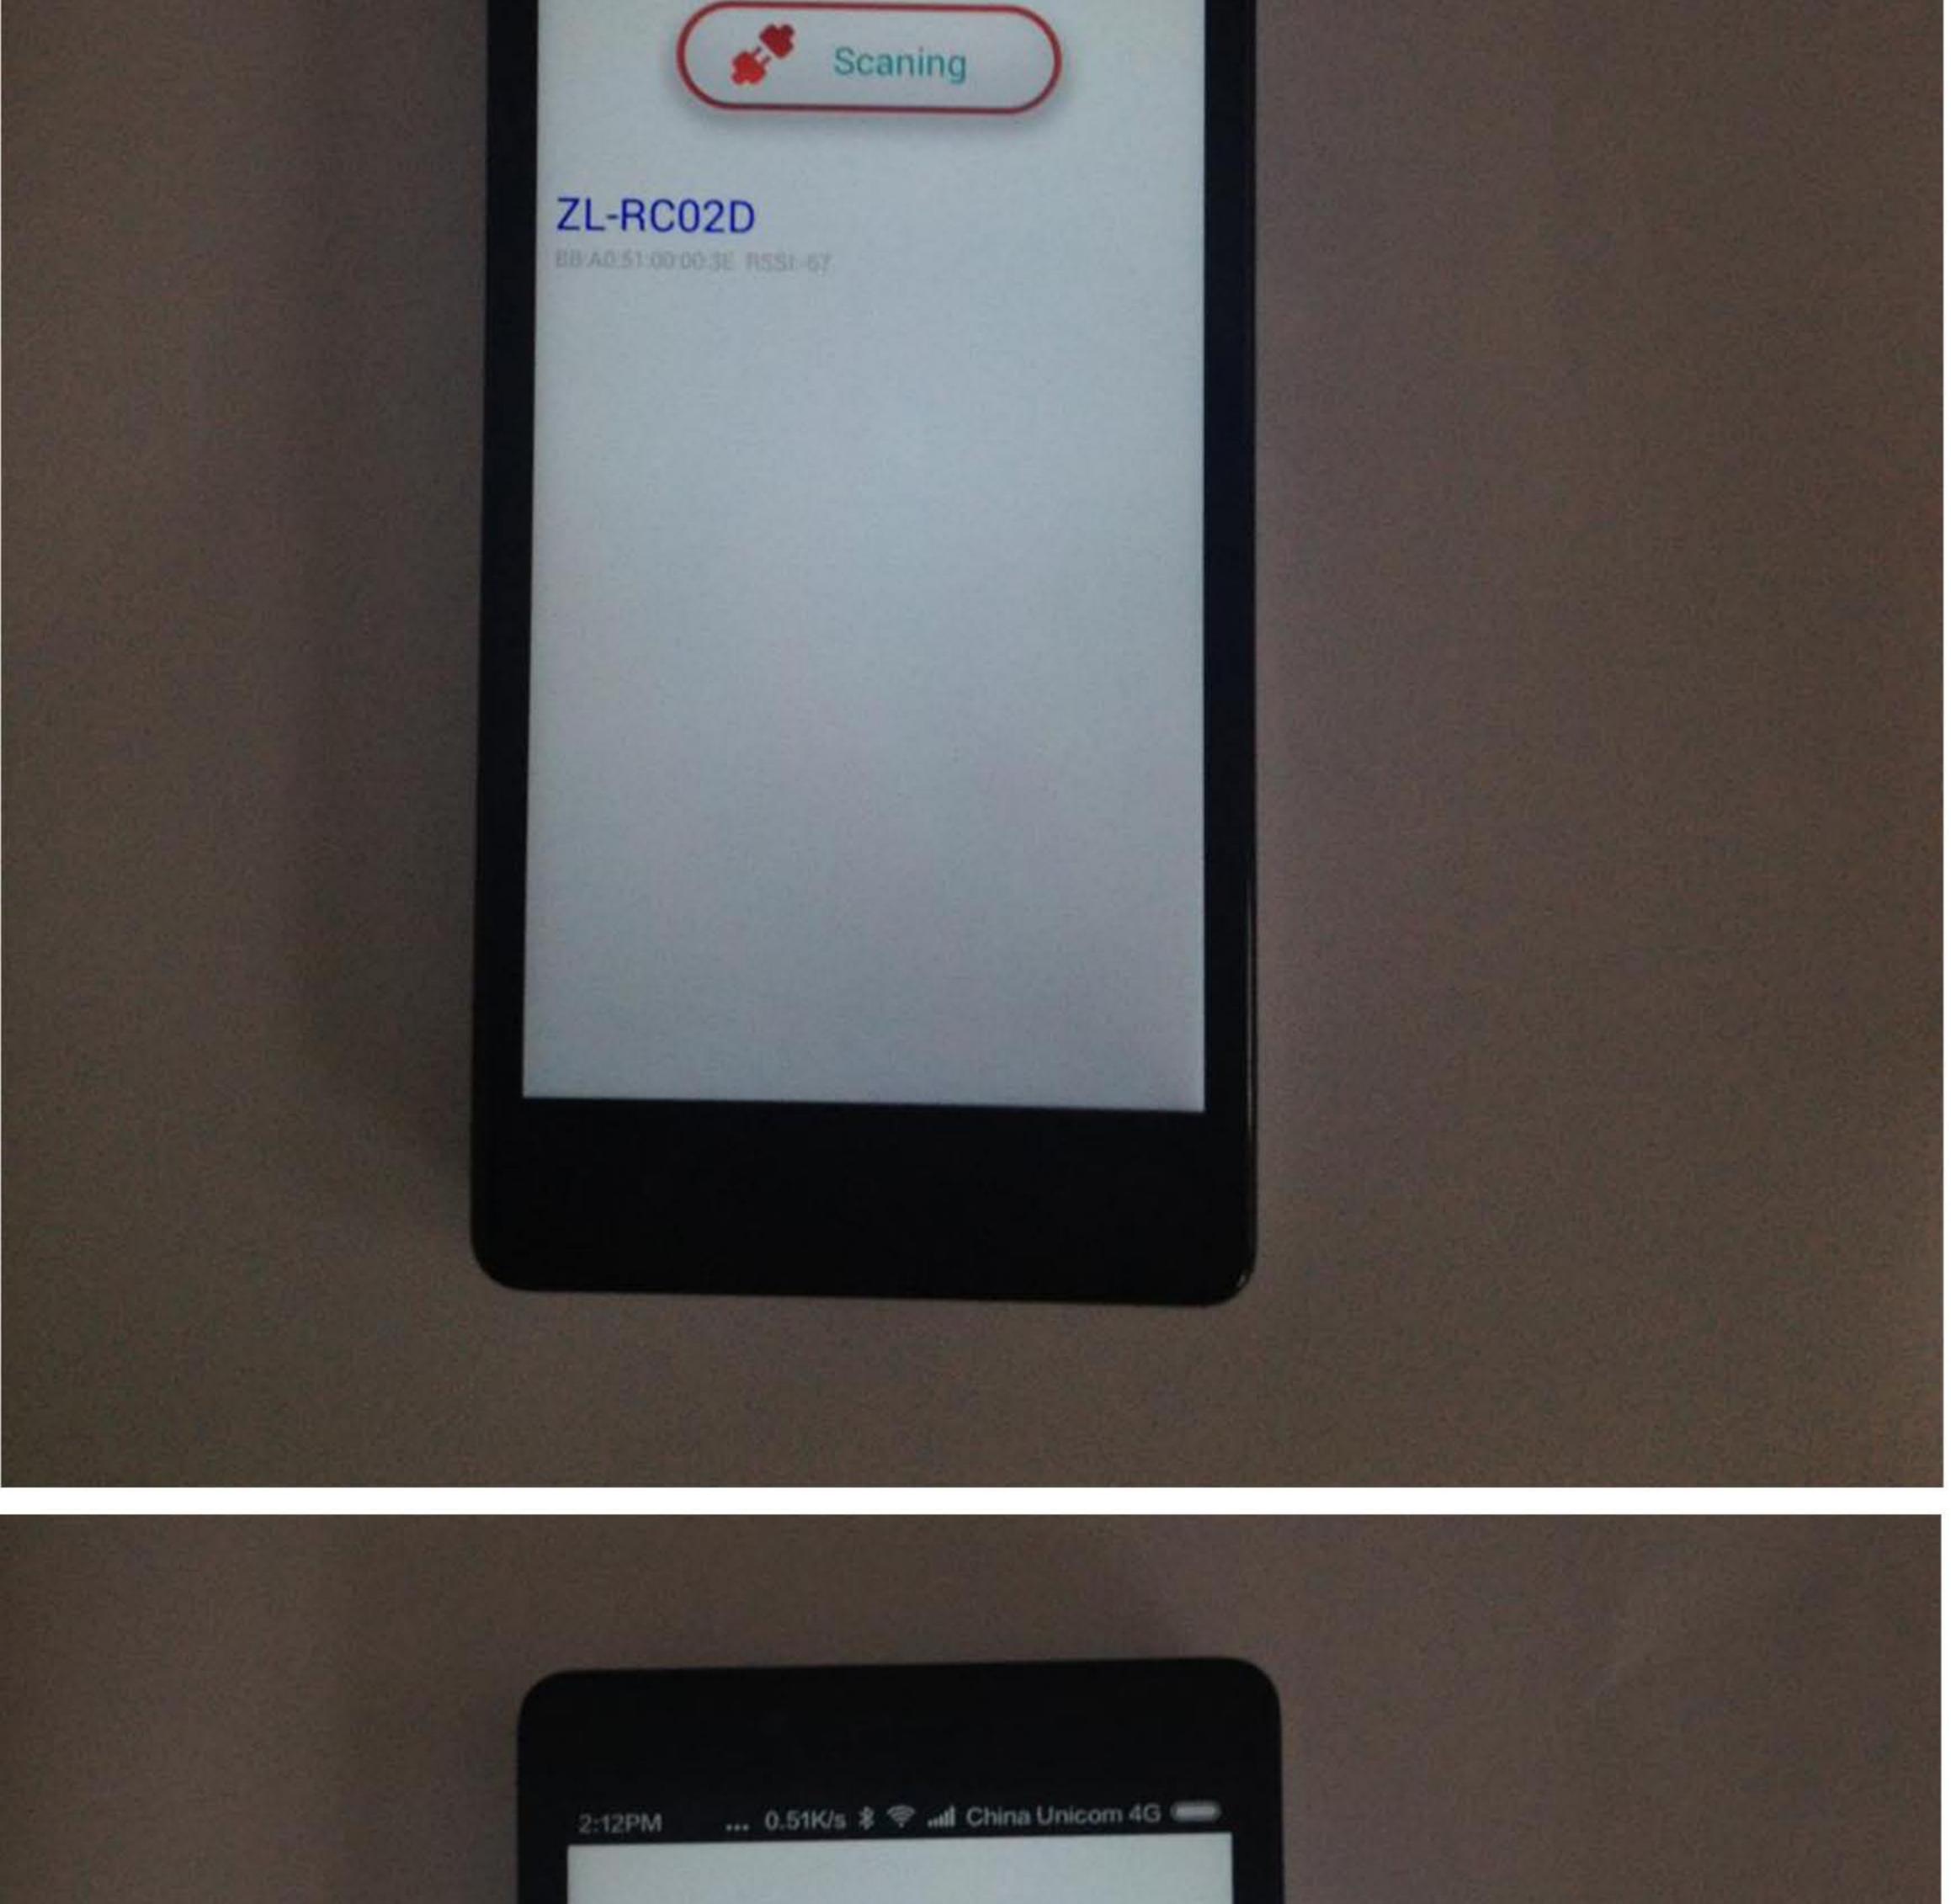

... 0.42K/s 求 零 ... China Unicom 4G

2:12PM

